
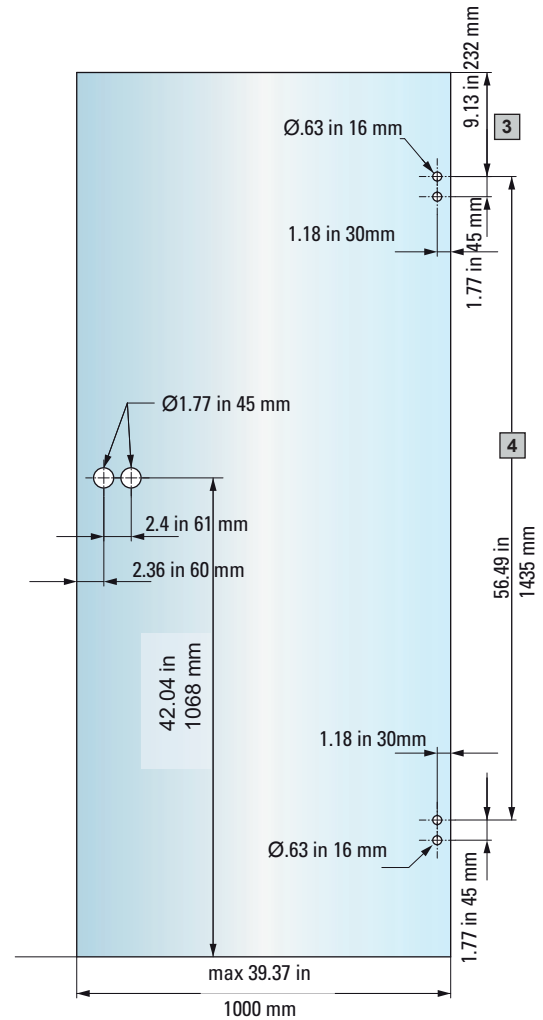


Glass processing for Studio Private Line locks and hinges with mounting plate for frame-independent doors

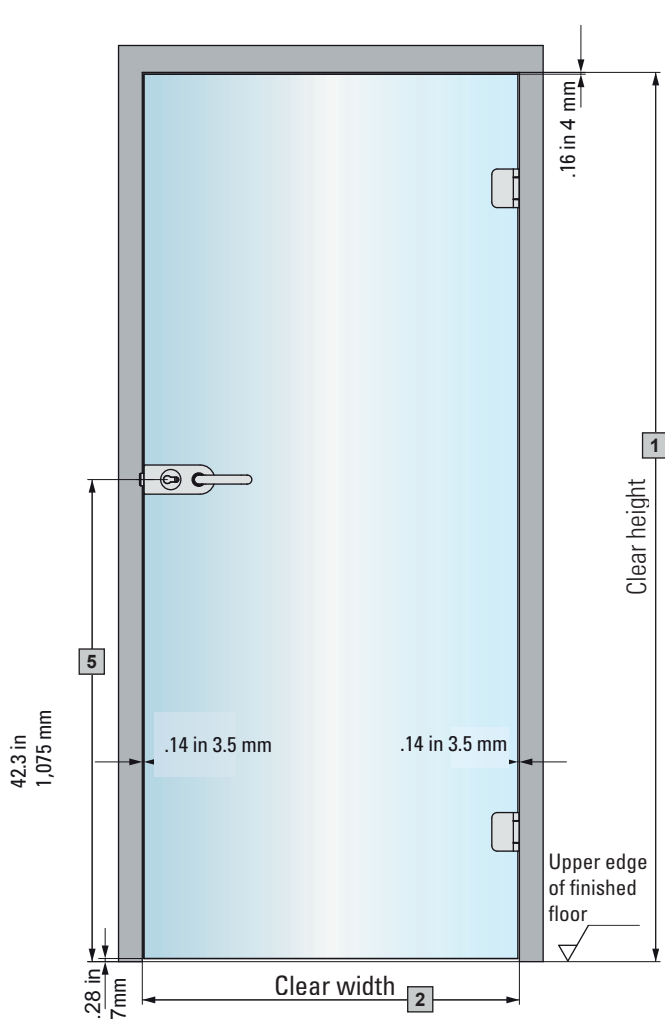

Legend:

- 1 Frame rebate dimension / height
- 2 Frame rebate dimension / width
- 3 Reference hinge dimensions as per DIN 18268
- 4 Hinge distance dimensions as per DIN 18111
- 5 Upper edge of finished floor up to centre of door latch

Note:

When using 3 door hinges, we recommend positioning the third hinge in the upper third section of the door (approx. 350 mm below the first reference line). Please also consult the frame and door suppliers for appropriate positioning.

* Recommendation for door heights of up to 2,200 mm (pursuant to DIN 18101)